

BHW wireless load cell



BHWG1~10t BHW1~150t

Description

Worldwide licence exempt: 2.4GHz operating frequency

Range Min: not less than 100 m

Protection class: IP67

Battery working life:


Active not less than 24 hours (full charge and turn off bcaklight)

The power will turn on/off automatically:
When the unit is vertical with the antenna is upturned,
the power will be on.(Option)

This wireless load cell can work with BWI-31 wireless hand held indicator, it is easy to assemble a simple wireless crane scale.

Work principle

After switchover via A/D, the load cell's output is digital. MCU will compensate non-linear, temperature parameters and other by digital via external RS232, calibration also is via RS232.

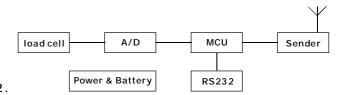


After the above process, the sender will to transmit though 2.4G wireless module, the wireless signal is included the load weight, remain of battery, temperature, weight state and so on.

Multi-channel working is an option, One handheld can be connected to up to 8 nos BHW.

Dimensions

(In mm. 1mm = 0.03937 inches)

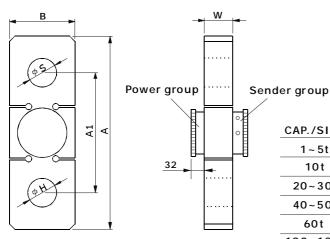

Note:

Do not open the sender group, no any share parts there!

CAP./SIZE	Α	A1	В	W	φS	φH	Shackle	Hook
1 ~ 5t	230	160	76	34	28	21	7/8	5/8
10 t	280	188	90	47	40	28	11/4	3/4
20~30t	370	230	125	55	53	53	13/4	
40~50t	430	260	150	65	73	73	21/2	
60 t	430	260	150	85	73	73	21/2	
100~120t	570	340	210	108	102	102	31/2	



Ningbo Benui Electric Co.,Ltd.
Add: No.18,YangShaShan Xi 9 Road, ChunXiao,
Ningbo Economic&Technical Development Zone,China
Tel: +86-574-8680 6868 0574-8680 6565
Fax: +86-574-8680 6862 0574-8680 6866

E-mail: sales@benui.com Http://www.benui.com www.loadcell.cn

Modifications reserved

All details describe our products in general from only. They are not to be understood as express warranty and do not constitute liability whatsoever. The company reserves the right to make amendments to this datasheet information without prior notice.

Document number: G12639-en www.benui.com
Revision: 01-Jul-2010 page1 of 1